

Screen Door Lock Assembly Instructions


Congratulations on your purchase of this Bastion screen door. Your door has been supplied complete with hinges (already mounted) and lock. The lock mechanism requires some assembly, and installation will depend upon the direction which your door will open.

Lock Pack Contents

Your lock package should contain the following :

- (1) Inner Handle (with snib)
- (2) Assembly Screws

- (3) Outer Handle (without snib)
- (4) Striker Plate

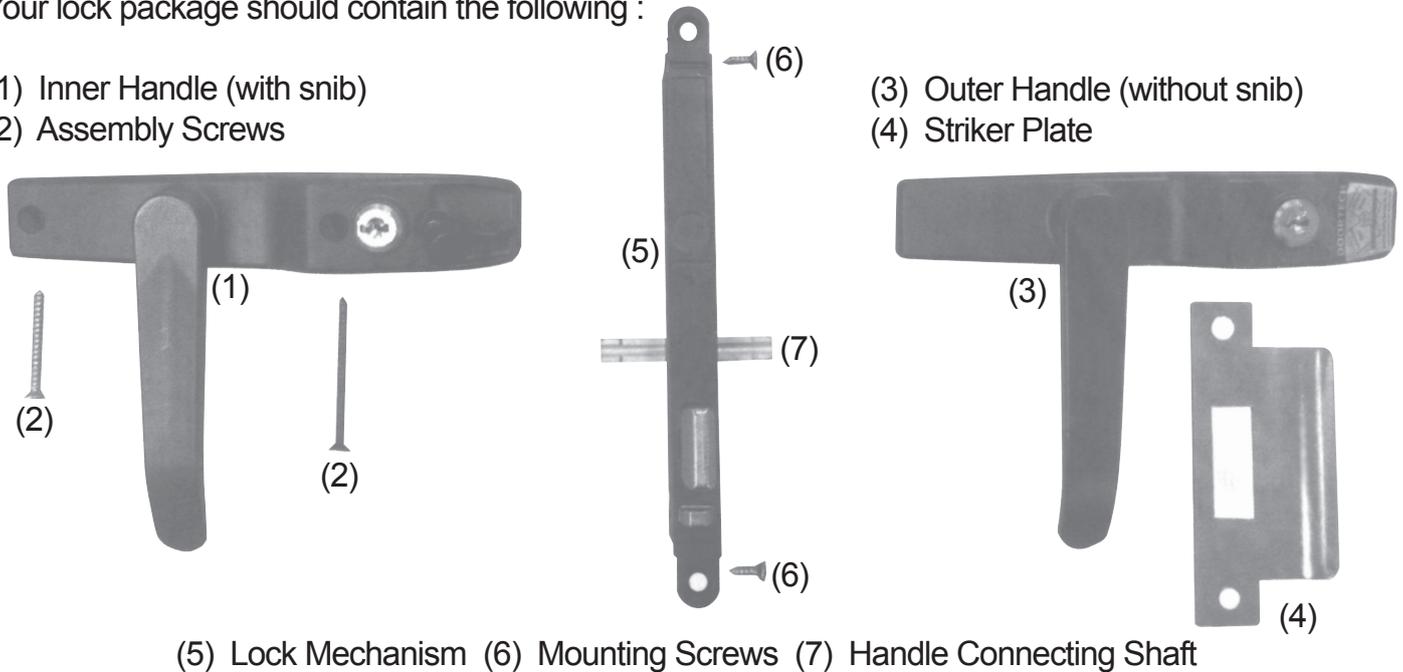

(5) Lock Mechanism (6) Mounting Screws (7) Handle Connecting Shaft

Your lock is also supplied with 3 keys.

Check the contents of your package and contact your place of purchase if you find any parts missing.

Assembly and Installation

It is recommended that you mount your door before you assemble and install the lock. This ensures that your lock won't be scratched during door mounting, and that you have the inner and outer sides of the lock facing the correct way.

Before starting the installation job, carefully measure the opening of the doorway, and compare with the size of the door, and the recommended opening sizes on the packaging.

If you are unsure of whether the door is compatible with your door way opening, please seek professional advice.

Size :Metric Standard 813 (w) x 2032 (h) mm

This door is designed to fit metric standard door frame openings between 815 & 820 mm wide and between 2035 & 2040 mm high.

Size :Imperial 806 (w) x 2024 (h) mm

This door is designed to fit imperial door frame openings between 810 & 815 mm wide and between 2030 & 2036 mm high.

To ensure the lock and handles fit into the door correctly, we advise that the "bars" on the door face outwards. Your door can swing outwards to the right, or left. Once you have completed mounting the screen door, check that you are happy with the alignment (both horizontally and vertically) and begin to install and assemble the lock. Note that on adjustable doors the flater profile faces outwards.

For warranty assistance please contact the Bunning's store where you purchased the product.

Screen Door Lock Assembly Instructions


Assembly and Installation

Once you have mounted the door and checked that it swings correctly, it is time to install the lock components. This section refers to the components, detailed on the previous page, by their component number (3) for example.

1. Install Lock Mechanism (5)

Your lock mechanism pushes into the lock opening of the door (as pictured), ensuring that the Mounting Screw holes (6) are aligned with the holes in the door.

Use the two Mounting Screws (6) to secure tightly.

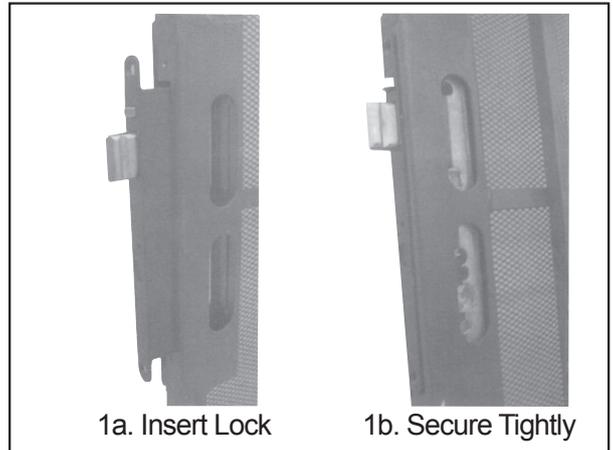


2. Installing Handles (1), (2), (3) & (7)

Before installing the handles, have numbers (1), (2), (3) & (7) ready to use. Insert Handle connecting shaft (7) through the lock and align the Outer Handle (3) over the connecting shaft (7) and position in place (as pictured).

Align the Inner Handle (1) ensuring that the snib lever is correctly in position and slots into the lock mechanism (5) correctly.

Ensure all components are correctly positioned and tighten Assembly Screws (2).

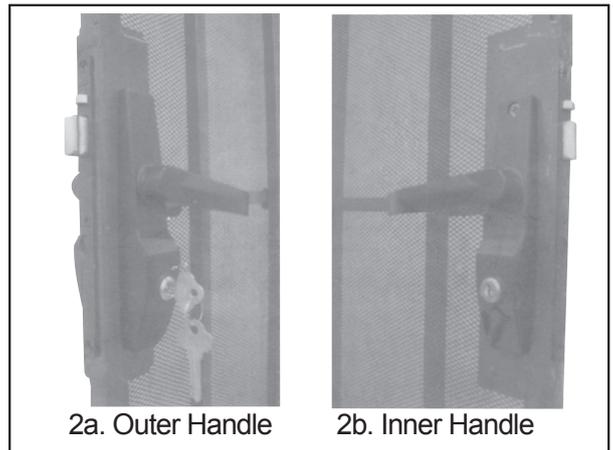

3. Attach Striker Plate (4)

Your lock mechanism should now be fully installed and operating correctly. Gently close the screen door until the lock touches the door frame. Carefully mark the position of the striker plate (4) and open the door.

Use the striker plate as a stencil to mark the position of the screw holes and trace the rectangular inner hole which needs to be chiseled out to allow the lock to fully extend. Take the striker plate away, make the appropriate cuts into the door frame, and mount the striker plate.

